


## RIGHT ANGLE CONNECTORS FOR SEMI-RIGID CABLE

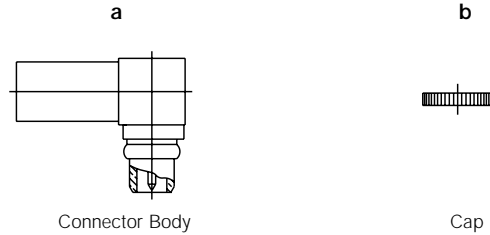

Amphenol Number	Connector Type	Cable RG-/U	Stripping Dimensions, inches (mm)	
			c	d
908-43400	Right Angle Plug	.086 Semi-Rigid	.090 (2.29)	.050 (1.27)
908-43600	Right Angle Plug	.047 Semi-Rigid	.090 (2.29)	.050 (1.27)

c

d

COPPER JACKET

NO BURRS

**Step 1** Prepare cable as shown. Remove burrs from outer/inner conductor of cable.

---

HEAT HERE

FEED SOLDER HERE

**Step 2** Insert cable into connector until it bottoms on shoulder of body. Solder outer conductor (Sn-60) recommended.

---

SOLDER

**Step 3** Solder inner conductor to contact (Sn-60 recommended). Place cover "b" on rear opening of body "A". Press cap "b" into housing "a" with a flat punch or tool #908-50100.